

Power Clean Advanced Cleaning Technology

CS-7, CS-8



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not submerge in water.
- Detach the appliance from the power supply cord before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with certain disabilities.
- Use this appliance only for its intended use as is described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not use this appliance with a damaged or broken screen or cutters, as injury may occur.
- For use only with UL listed Remington power adaptors model numbers PA-400/PF-400.
- For use only with Remington cleaning solution CCR-REM.


SAVE THESE INSTRUCTIONS

Product Features

Remington® Power Clean

Congratulations on your purchase of a premium Remington® cleaning system.

- (A) Upper Base Housing
- (B) On Button
- (C) Solution Cup
- (D) Lower Base Housing
- (E) Charging Dock
- (F) Cleaning Solution
- (G) Power Adaptor

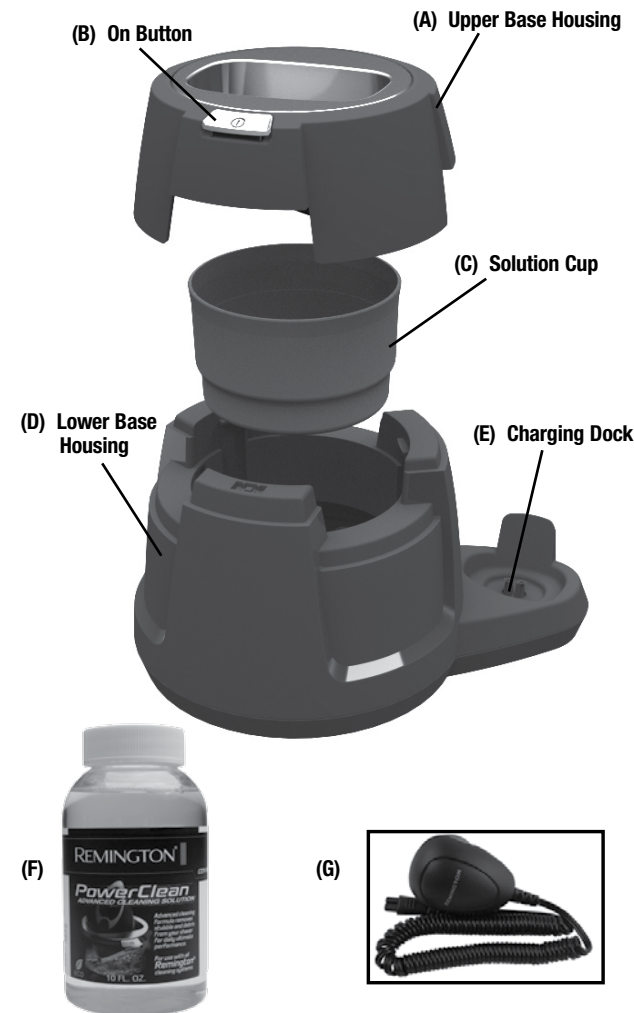

How To Use

Preparing the Cleaning System

- 1. Lift the upper housing off the unit. Remove the cleaning solution cup from the base.
- 2. Pour approximately 4oz. of solution into the cup making sure the liquid level is within the textured band visible on the inside of the cup.
- 3. Place the cup back inside the lower base and replace the upper housing.
- 4. Plug the power adaptor into the cleaning base and then into the wall outlet.

Operating the Cleaning System

For best results, run the cleaning cycle after each shave. If you have used your shaver for multiple days between cleanings, or you notice excessive buildup on the cutters, you may need to turn the shaver ON for 60 seconds during the cleaning cycle.

Cleaning

- 1. Ensure the pop-up trimmer is in the down position.
- 2. Place the shaver head-down in the opening on the top of the cleaning base, making sure the ledge on the inside of the cleaning base opening is aligned with the trimmer to position the shaver in the correct orientation for cleaning.
- 3. Press the ON button to start the cleaning cycle. The cleaning cycle will run for approximately 4 minutes. During this time, DO NOT remove the shaver from the base.
- 4. When the cleaning cycle has completed, a fan will turn on to assist in drying the shaver. When the fan turns off (after approximately 4 hours), the process is complete.

NOTE: The shaver cannot charge in the cleaning base, only in the charging dock connected to the cleaning base or using the charging adaptor.

NOTE: During the cleaning cycle and the drying cycle, the charging stand will not function. To charge your shaver, wait until the drying cycle has completed.

Cleaning Solution

For best results, ensure the solution is filled to the appropriate level before each cleaning cycle. With daily use, it may be necessary to add solution every 3-4 days. After 14 days of use, the solution should be discarded and replaced entirely.

To replace the cleaning solution:

- 1. Remove the cup from the base unit.
- 2. Dispose of the solution in a sink or toilet.
- 3. Rinse any remaining debris from the cup using water.
- 4. Dry the cup.
- 5. Fill the cup with fresh solution.
- 6. Replace cup into the base unit.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

Questions or comments:

Call 800-736-4648 in the US or 800-268-0425 in Canada.
Or visit www.RemingtonProducts.com

Dist. by: Spectrum Brands, Inc.,
Madison, WI 53711

Dist. by: Spectrum Brands Canada Inc.,
Mississauga, ON L5L 0A1

® Registered Trademark of ROVCAL, INC.

© 2010 ROVCAL, INC.
03/10 Job# CS38546

Manufactured to Remington's specifications in the PRC.

T22-28753

12VDC