

# REMINGTON®

Featuring  
**Flexing Foil**  
TECHNOLOGY

F-3790

## Use and Care Guide



### Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:  
Proof of Ownership • Product Protection • Product Registration • Special Offers  
Register online at: [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Read all instructions before using this shaver.**

### DANGER

**To reduce the risk of electric shock:**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Use only when the shaver is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge in water.

### WARNING

**To reduce the risk of burns, fire, electric shock, or injury to persons:**

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products

 
are being used or where oxygen is being administered.

- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.

- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.
- The power unit is intended to be correctly oriented in a floor mount position.

## SAVE THESE INSTRUCTIONS

### Product Features

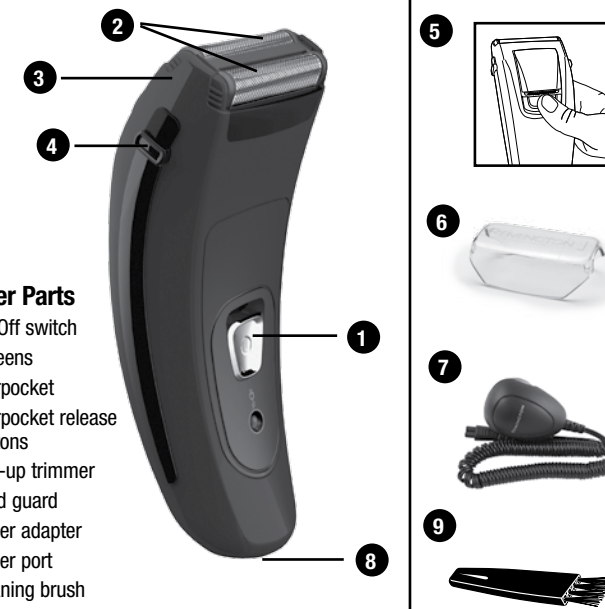

#### Shaver Parts

1. On/Off switch
2. Screens
3. Hairpocket
4. Hairpocket release buttons
5. Pop-up trimmer
6. Head guard
7. Power adapter
8. Power port
9. Cleaning brush

### About Your Shaver

 
 
 
FEATURE	F-3790
POWER SYSTEM	rechargeable
FULL CHARGE TIME	16 hrs
CORDLESS SHAVING TIME	40 min
INDICATOR	charging
VOLTAGE TYPE	single
REPLACEMENT PART NO.	SP-62

**Charging Indicator** – green light that glows when the shaver is being charged.

### Charging

**Before using, read the important safety instructions in front of the manual.**

1. Connect the cord to the shaver and then to the electrical outlet. (Diagrams A & B) The charging indicator light will glow green.
2. Charge your new shaver for 24 hours before its first use. This first charge is important to the shaver's battery life. (Diagram C)



**\*\*Use the product until the battery is low. To preserve the life of the batteries, let them fully run out every six months, then recharge them for a full 24 hours\***

#### CAUTION!

- Make sure the shaver and your hands are dry when placing the shaver on charge.
- Always charge the shaver in a cool, dry place.

 
### Shave

**Before using, read the important safety instructions in front of the manual.**

1. Begin by removing the protective head guard from your shaver.
2. Slide the on/off button up to turn on. (Diagram D)
3. Slide trimmer button down to engage and use it to remove long hair first. Then close down when finished. (Diagram E)
4. Stretch the skin with your free hand so the hairs stand upright.



5. Hold the shaving head so all screens touch your skin simultaneously. The independently floating screens automatically adjust to the contours of your face. Only apply light pressure on the shaving head while shaving and use short, circular strokes. (Diagram F)
6. After shaving, turn the shaver off. (Diagram D)

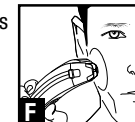



**\*\*Remington recommends that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system\*\***

### Shaving Tips

- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to the screens.

### Trim

  1. Pull trimmer release button to engage trimmer. (Diagram G)
2. Trim long, difficult hairs and side burns. (Diagram H)
3. Close trimmer by pressing down. (Diagram I)

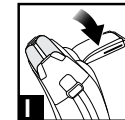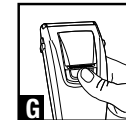

## Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

**CAUTION!** Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

### To Remove the Rechargeable Battery:

1. Remove headguard and hair pocket from shaver.
2. Using a small screwdriver, pry power switch off of shaver.
3. Using a small screwdriver, pry front cover plate (painted section) off of shaver.
4. Using a Phillips screwdriver, remove (4) screws from front of shaver.
5. Take rear housing off of shaver to expose batteries.
6. Cut wires connecting batteries to the circuit board.
7. Remove batteries and dispose of properly.

## Cleaning & Care

 
 
**NOTE: \*\*When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.\*\***

For optimal shaver performance, clean your shaver after each use.

- Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's screens and cutters.



### Daily Cleaning:

1. Press hair pocket release buttons and remove hair pocket assembly. (Diagram J)
2. Tap the stubble from the foils and cutters.
3. Replace the hairpocket assembly. (Diagram K)

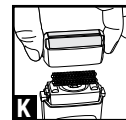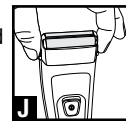

### Monthly Cleaning:

  1. Press hair pocket release buttons and remove hair pocket assembly. (Diagram L)
2. Tap the stubble from the foils and cutters.
3. Use the cleaning brush to sweep any loose hairs from the cutters and trimmer. (Diagram M)
4. After cleaning, replace the hairpocket assembly. (Diagram N)

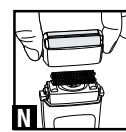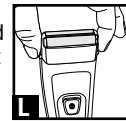

## How To Order Shaver Accessories

Please refer to the features chart near the front of this manual that lists the correct replacement part number for your shaver.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

**Maintain your shaver's peak performance! Keep your shaver performing like new!**

- Because your satisfaction is important to us, we want to make it simple for you to keep your new shaver performing at its peak.
- Did you know that for the best possible shave, it is necessary to replace the heads and cutters on your shaver every 12 months?
- Remington makes this easy!

### Two easy ways to order!

1. Call!  
U.S. Residents call  
1-800-392-6544  
Canadian Residents call  
1-800-268-0425
2. Order Online at  
[www.RemingtonProducts.com](http://www.RemingtonProducts.com)



Replacement Part: SP-62

## Product Registration

By registering your new Remington® product you will receive these important benefits:

- Proof of ownership
- Product protection
- Product registration
- Special offer

Register online at:  
[www.RemingtonProducts.com](http://www.RemingtonProducts.com)

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:  
■ Screens and cutters

**KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.**

**This warranty does not cover products damaged by the following:**

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

## Performance Guarantee

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

120 VAC, 60 Hz 3.8 V, 80mA

**Questions or comments:**  
Call 800-736-4648 in the US or 800-268-0425 in Canada. Or visit [www.RemingtonProducts.com](http://www.RemingtonProducts.com)

Dist. by: Spectrum Brands, Inc.,  
Madison, WI 53711

Dist. by: Spectrum Brands Canada,  
Inc., Mississauga, ON L5L 0A1

© Registered Trademark of ROVCAL,  
INC., a subsidiary of Spectrum  
Brands, Inc.

© 2010 ROVCAL, INC 03/10  
Job #CS37720

Manufactured to Remington's specifications in the PRC.

T22-27927

Contains  
  
listed adaptor